


Thank you for purchasing the Vestax Original Replacement Parts: PDX Counterweight designed for each type of turntables. Three types are produced for the PDX-2000/3000 Series:

**PDX A counterweight** (matte black with revolving ring with marks)

**PDX AP counterweight** Size (M) / Size (L) (silver surface without marks)

#### Installing the balance Weight


- ① From the backend of the tone arm (towards the rear panel) place the balance weight onto the shaft and turn counter clockwise. (Refer to the illustration)

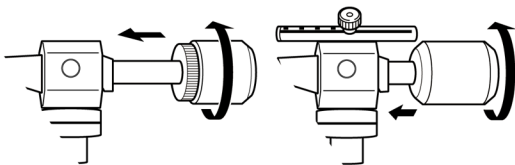

## ADJUSTMENT(S)

#### Adjustment of Horizontal Zero Balance


- ① Install the cartridge, headshell and balance weight to the tone arm.
- ② Unlock the arm rest, adjust the tone-arm balance by rotating the balance weight, so that the tone-arm stays in horizontal position in balance.

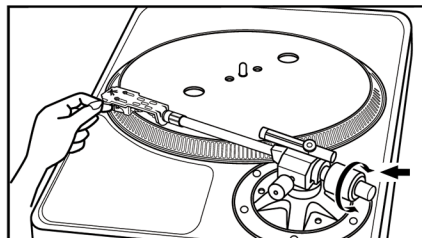

#### NOTE

Please be sure that the needle does not touch the platter or the other object in adjustment procedure.

- ③ Put the tone-arm on the arm rest and lock it.

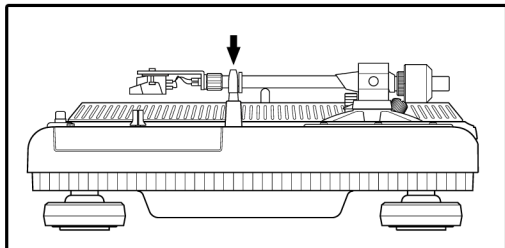

- a) When the balance weight and cartridge are balanced, the tone arm is held horizontal.



- b) Excessive forward advancement of the balance weight causes the cartridge side to be lowered.



- c) Excessive backward retreatment of the balance weight causes the cartridge side to be raised.