

 
SOUNDWAGON™

USER'S GUIDE


INSERTING THE BATTERY

1. Open the battery compartment cover.


Press on the latch and lift to open the cover.

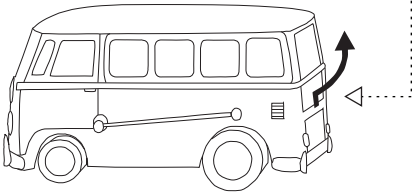

2. Insert one 9 volt battery being sure the plus and minus sides are properly aligned. (use alkaline battery)

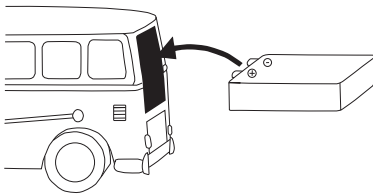

3. Close the cover, making sure the latch clicks into place.

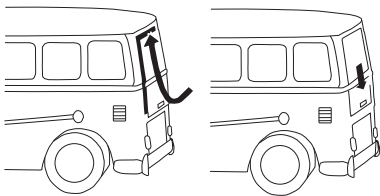


NOTE

- ◇ The battery should be replaced as soon as you notice a deterioration in sound quality and speed.

PARTS


Battery compartment cover

Speaker

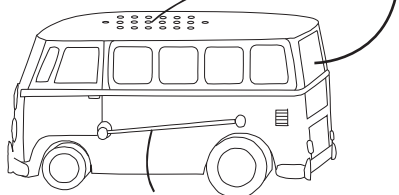

ON / OFF Switch

Pickup Stylus Drive wheels

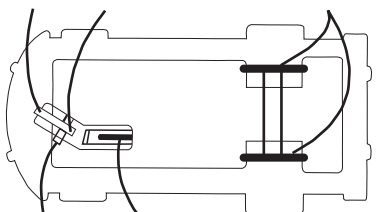


Hook Guide wheel

IMPORTANT


1. Use only 33 1/3 rpm phonograph records.
2. Place the record on a flat level surface. If the record is not flat, the Sound wagon will travel around the record at an irregular speed and sound.

TO PLAY A RECORD

1. Release the pickup from the hook.

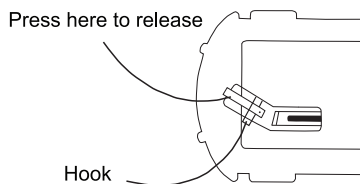

2. Tilt the Soundwagon so the pickup falls back against the hook (but is not locked under it). Then place the Soundwagon on the record so that the guide wheel and the outside drive wheel are parallel to the record groove.

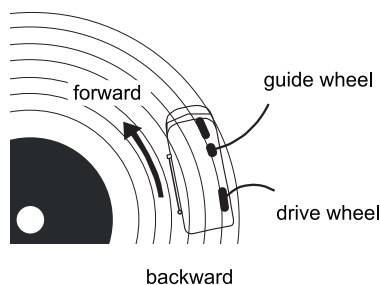

3. Be sure that the Soundwagon is pointed in the right direction. If you start it in the opposite direction, it will run off the record.
4. While gently pressing down on the Soundwagon with one hand, flip the switch up to turn the Soundwagon on.

TO STOP THE SOUNDWAGON

1. Flip the switch down to the off position being careful not to bump the Soundwagon sideways.
2. Secure the pickup to the hook.

PRECAUTIONS

- ◇ Avoid vibrations, direct sunlight and excessive dust or moisture.
- ◇ Keep liquids and solid objects (like pins) from falling into the Soundwagon.
- ◇ Do not disassemble the Soundwagon.
- ◇ Secure the pickup to the hook when the Soundwagon is not in use.
- ◇ Do not run the Soundwagon on any surface except a record.
- ◇ The Soundwagon is not recommended for children under the age of 12.

MAINTENANCE

- ◇ If the Soundwagon's body becomes dirty, clean it with a soft cloth slightly moistened with water or a mild detergent solution. Do not use solvents such as alcohol, benzene or thinner as they may mar the finish.
- ◇ Wipe the wheels with a cloth moistened with denatured alcohol from time to time.
- ◇ Clean the stylus periodically with a soft brush.



Manufactured And Distributed By

stokyo Co., Ltd.

Japan Headquarters

Century City #101, 13-17 Haramachi, Isogo-Ku
Yokohama-shi, Kanagawa-ken 235-0008 Japan

Tel: +81-(0)45-353-3370 / Fax: +81(0)45-353-3371

STOKYO, LLC

USA Office

800 S. Pacific Coast Highway,
Suite #8-187, Redondo Beach, CA
90277 USA

tel: 1.310.945.5777 / Fax: 1.310.868.2888

Email: soundwagon@stokyo.com

Website: www.soundwagon.jp / www.stokyo.com

MADE IN JAPAN **STOKYO™**